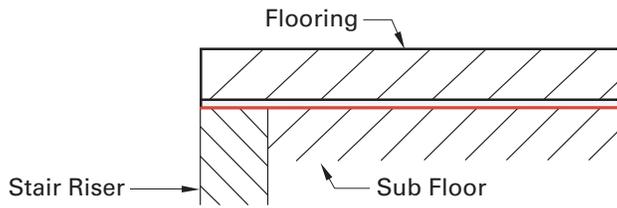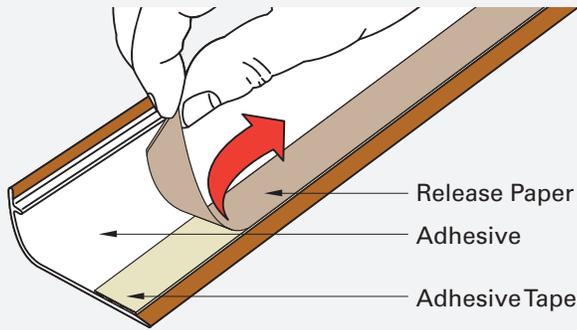VersaEdge Stair Nose   **Installation on flooring with an overall thickness of up to 19 mm (0.75″).**
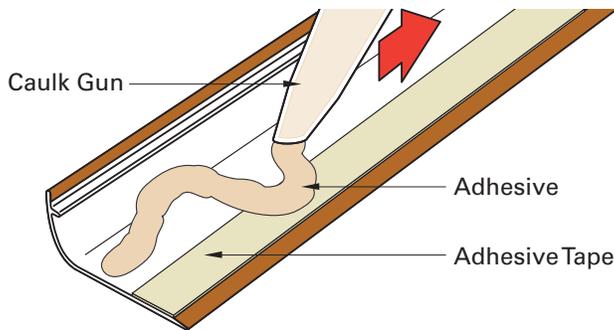
Step 1

Install the riser flush to the stair. Clean flooring and molding with a damp cloth (water only) to remove all dust and residue. Let dry before applying adhesive.

Step 2

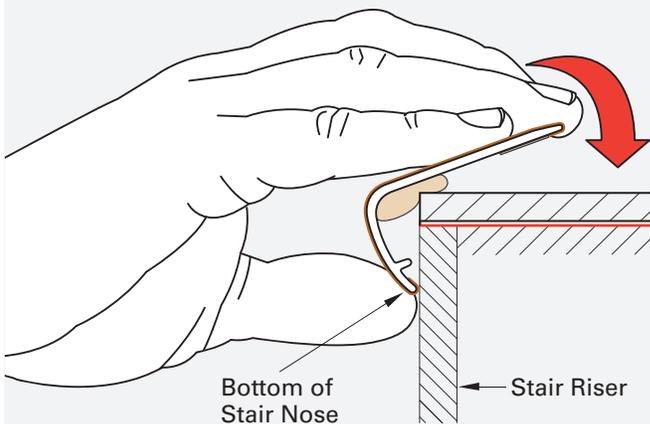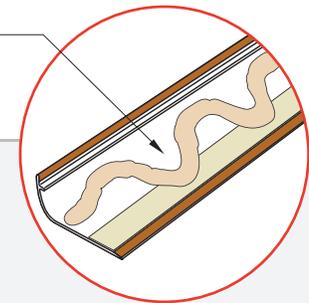Turn Stair Nose over and gently peel the release paper all the way off the adhesive tape.

The purpose of the double-sided tape is to secure the molding firmly in place until the premium polyurethane construction adhesive totally cures.
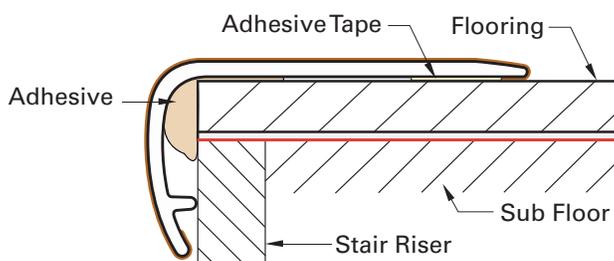
Step 3

Next, roughen the inside surface of the VersaEdge to increase bond by means of 60 grit sandpaper or a metal brush. Then, the apply a generous bead of a ***Premium Polyurethane Construction Adhesive*** along the entire inside corner. **Be sure to overlap the tape with the adhesive.**

Underside of molding generously covered with adhesive

Step 4

Touch the bottom of molding to the stair riser and carefully roll the stair nose in place. Make any final adjustments before you push the molding all the way down. Once it's in the final position, press down firmly with your hands and make your way down the entire stair nose. It may take 2 or 3 passes to set it firmly in place.
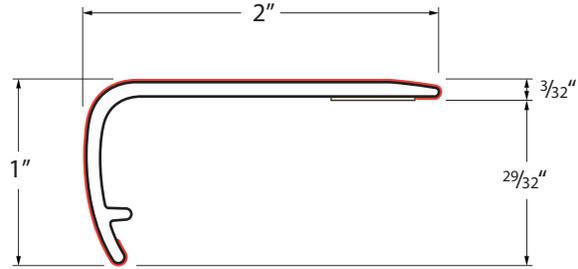
Step 5

For *Low Traffic*, let the adhesive cure for at least 1 hour before walking on it. For *Heavy Traffic*, wait 24 to 48 hours.

NOTE: *Complete cure takes 48 hours.*

VersaEdge Stair Nose | **Installation on flooring with an overall thickness of up to 19 mm (0.75").**
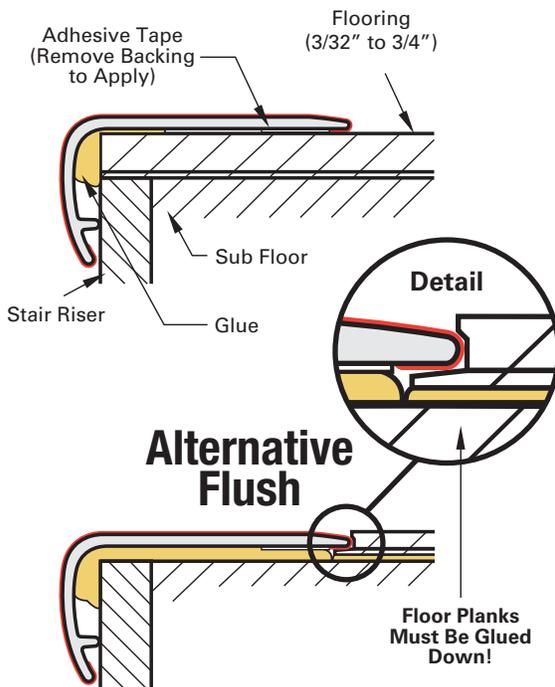
2"
3/32"
1"
29/32"

VersaEdge Applications

"Lock-Down" Install
(e.g. Stair Treads)

Used where floating of the floor is not required, as with Stair Tread or Glued-Down/Nailed-Down floors.
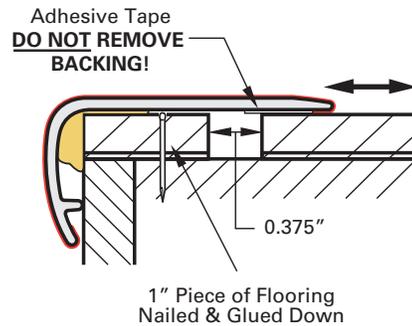
This can be used on floating floors where expansion and contraction will occur on the opposite side of the flooring plane.

Laminate / Vinyl / Hardwood / Engineered Wood

Adhesive Tape (Remove Backing to Apply)
Flooring (3/32" to 3/4")
Sub Floor
Stair Riser
Glue

Detail

Alternative Flush

Floor Planks Must Be Glued Down!

"Floating" Install

Laminate / Engineered Wood

Adhesive Tape **DO NOT REMOVE BACKING!**
0.375"
1" Piece of Flooring Nailed & Glued Down

Vinyl