


Reducer

Use Versatrack (Metal Track) for 6 - 9.5 mm floors.




6 - 9.5 mm Floors

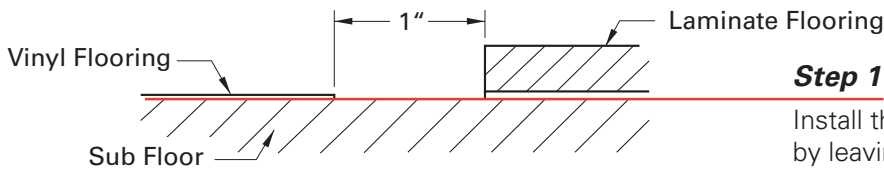


Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap between the vinyl and the laminate floor for the installation of the Reducer.

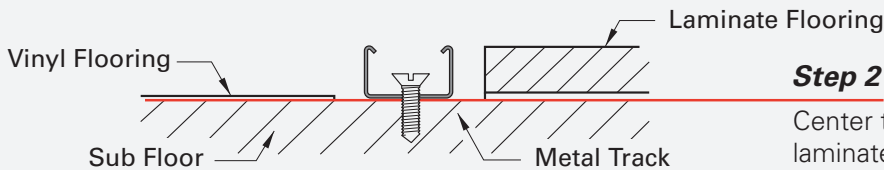

Step 2

Center the U-Track between the vinyl and laminate floor and screw it to the sub-floor by using 4x3/4" screws.

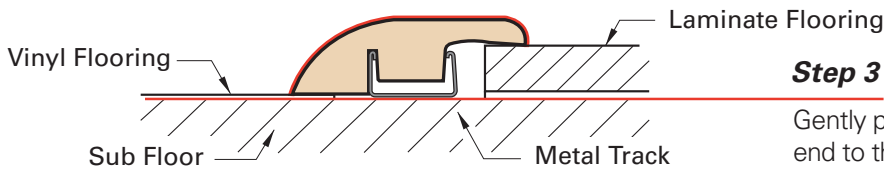


Step 3


Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!

Use Versatrack & Versatrack Shim for 9.5 - 12.3 mm floors. Use the same molding & track, just add Versatrack Shim.

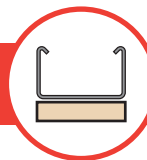


9.5 - 12.3 mm Floors

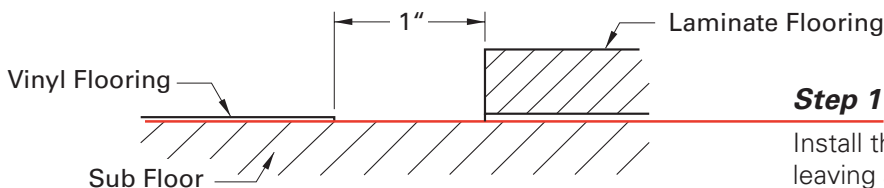


Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap between the vinyl and the laminate floor for the installation of the Reducer.

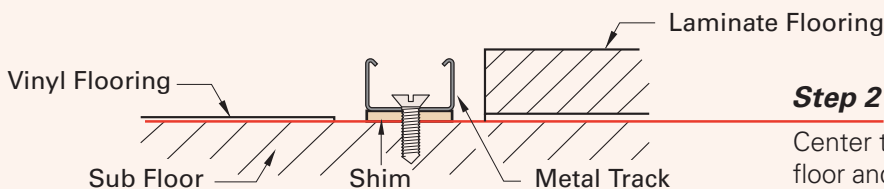

Step 2

Center the U-Track and Shim between the vinyl and laminate floor and screw them to the sub-floor by using 4x5/8" screws.

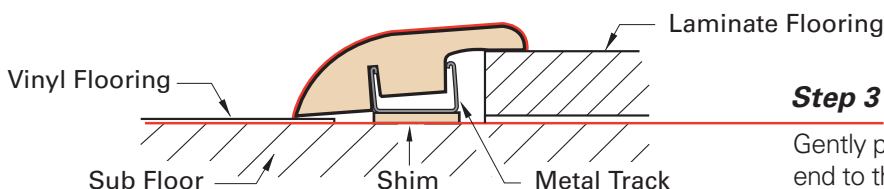


Step 3

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.


!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!

Reducer

Use the black Thin-Track for 7 - 9.5 mm floors.

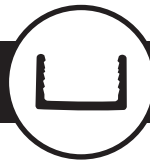


7 - 9.5 mm Floors

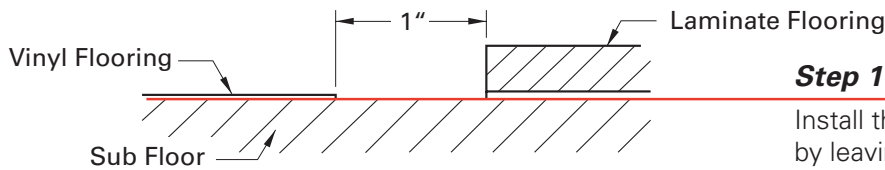


Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap between the vinyl and the laminate floor for the installation of the Reducer.

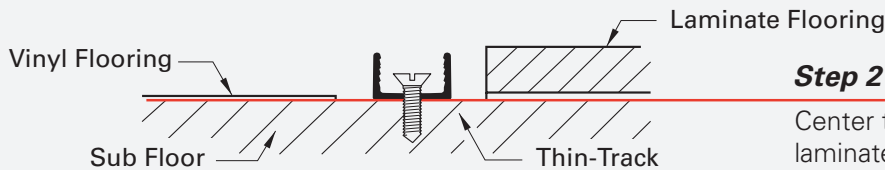

Step 2

Center the U-Track between the vinyl and laminate floor and screw it to the sub-floor by using 4x3/4" screws.

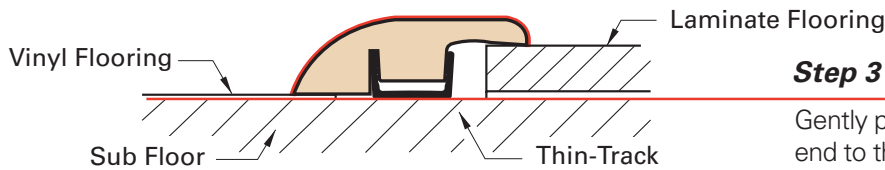


Step 3


Gently press the molding into the track starting from one end to the other just like you would close a Zip-LOCK bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!

Use the white Thick-Track for 9.5 - 12.3 mm floors. Use the same molding, it is just a different track.

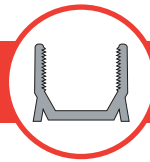


9.5 - 12.3 mm Floors

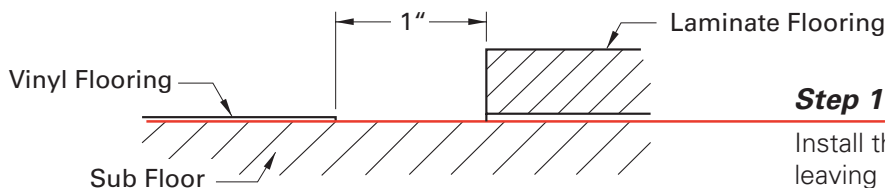


Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap between the vinyl and the laminate floor for the installation of the Reducer.

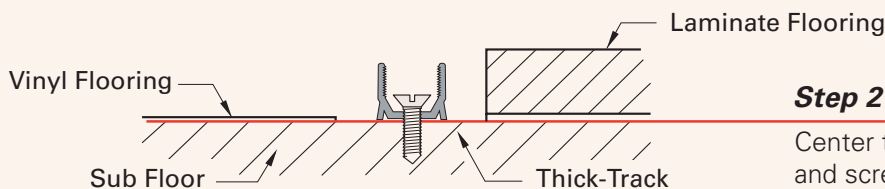

Step 2

Center the U-Track between the vinyl and laminate floor and screw it to the sub-floor by using 4x5/8" screws.

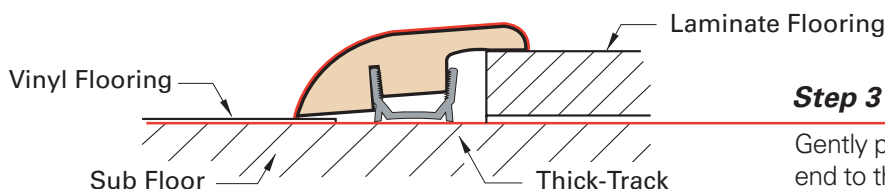

Step 3

Gently press the molding into the track starting from one end to the other just like you would close a Zip-LOCK bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!