T-Molding

Use Versatrack (Metal Track) for 6 - 9.5 mm floors.

6 - 9.5 mm Floors

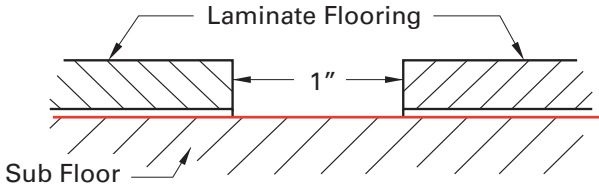

Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap for the installation of the T-molding.

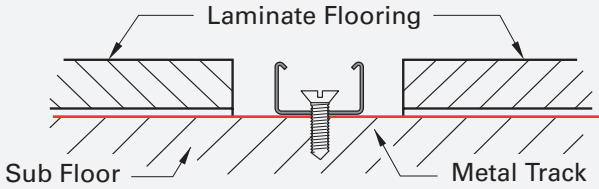

Step 2

Center the U-Track between the two laminate floors and screw it to the sub floor by using 4x3/4" screws.

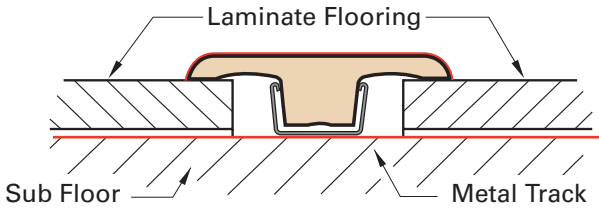

Step 3

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!

Use Versatrack & Versatrack Shim for 9.5 - 12.3 mm floors.
Use the same molding & track, just add Versatrack Shim.

9.5 - 12.3 mm Floors

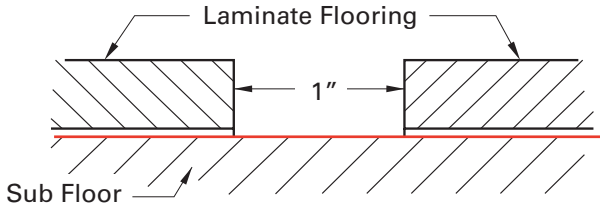

Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap for the installation of the T-molding.

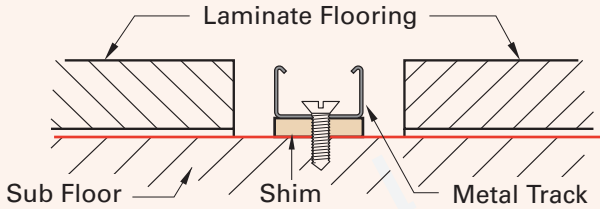

Step 2

Center the U-Track and Shim between the two laminate floors and screw them to the sub floor by using 4x5/8" screws.

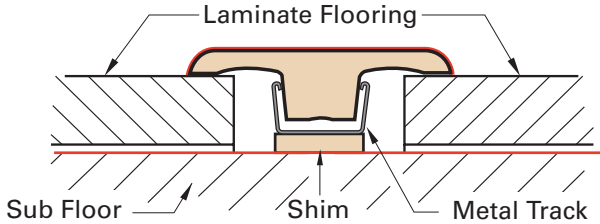

Step 3

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!

T-Molding

Use the black Thin-Track for 7 - 9.5 mm floors.

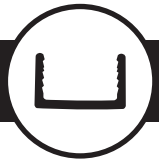

7 - 9.5 mm Floors

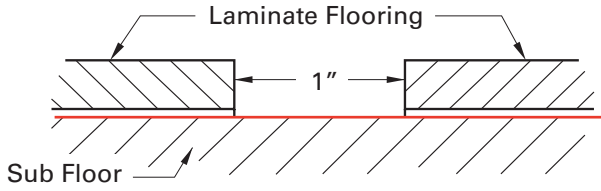

Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap for the installation of the T-molding.

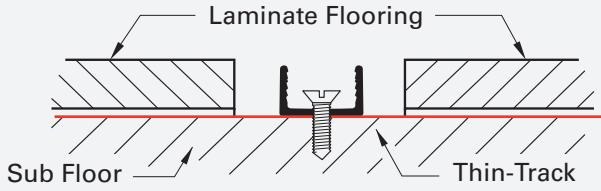

Step 2

Center the U-Track between the two laminate floors and screw it to the sub floor by using 4x3/4" screws.

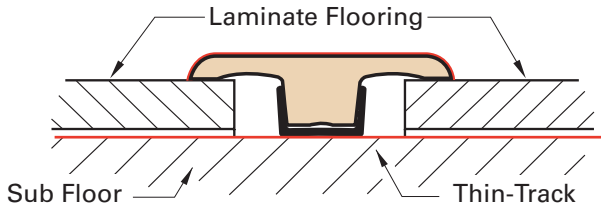

Step 3

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!

Use the white Thick-Track for 9.5 - 12.3 mm floors.
Use the same molding, it is just a different track.

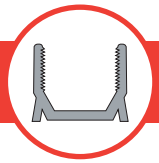

9.5 - 12.3 mm Floors

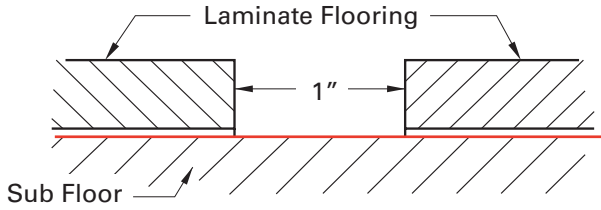

Step 1

Install the flooring planks including the underlayment by leaving a 1" inch (25mm) gap for the installation of the T-molding.

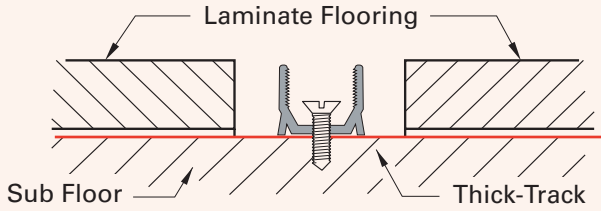

Step 2

Center the U-Track between the two laminate floors and screw it to the sub floor by using 4x5/8" screws.

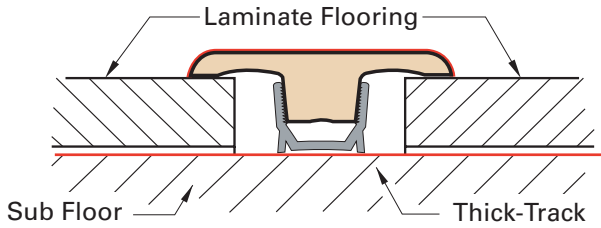

Step 3

Gently press the molding into the track starting from one end to the other just like you would close a Zip-Lock bag.

!!! Do not try to push the entire molding in all at once by just pressing it in from top !!!